

CN2x2 IP Phone

Quick Start Guide, document 96-00209-01

1. By factory default, the CN2x2 obtains its IP address from a DHCP server. Alternatively, you may assign a static IP address to the phone. For most applications you should use the default network setting. If you want a DHCP server to set the IP address skip to step 3.
2. To assign a static IP to the CN2x2, do the following steps:
 - Press the “Menu” button.
 - Press the “Down” button three times and you should see “4. Device Config”.
 - Press the “OK” button.
 - Enter “admin” for “Login” and then press the “Enter” button.
 - Enter “admin” for “Password” and then press the “Enter” button.
 - Press the “OK” button.
 - Press the “Down” button once. The LCD should display “2. + FIXED IP”.
 - Press the “OK” button twice.
 - Enter the IP address in this screen. To enter a “.”, press the “*” key twice.
 - Press the “OK” button once you are done.
3. Once the CN2x2 obtains its IP address, you may configure the phone via the browser UI. To find out the IP address on the CN2x2:
 - Press the “Menu” button.
 - Press the “1” button twice.
 - The IP address should be displayed on the LCD screen of the phone.
4. Start a web browser on your PC and enter the IP address of the phone in the URL entry field.
5. Click Call Settings on the menu.
6. The following fields are mandatory under this window:
 - **SIP Phone Number** – Enter the phone number that is assigned to this phone. In most cases, this is the same as the user name if the user name is a number.
 - **SIP Proxy** – Enter the IP address or Fully Qualified Domain Name (FQDN) and port number of the proxy server (e.g. 192.168.1.100:5061 or sip.zed-3.com). You need to specify the port number of the proxy server only if it is not using port 5060.
 - **SIP Registrar** – Enter the IP address or FQDN and port number of the registrar server. Usually, this would be the same IP address as the Proxy Server.
 - **Auth ID** – Enter the ID or user name assigned to you for authentication. In most cases, this has the same value as the phone number or user name.
 - **Auth Password** – Enter the password for this Auth ID.
7. Press the “Save” button when you are done configuring the CN2x2.
8. Click System Reboot to reboot the phone.

After the setup, you need to make sure that your CN2x2 can receive or make calls from the IP-PBX or service provider. Make a few test calls with the CN2x2 before putting the CN2x2 in service.